

Tmax V5

SIGELEI Tmax V5 is the improved one for Tmax with bigger OLED showing three items at the same time and it can also charge the mobile phone. It can deliver 3.0 to 6.0 Volts or 3.0 to 15.0 Watts.

- Material: stainless steel and aluminum
- Thread: 510&ego thread
- Battery: 18350/18650
- Weight: 261g
- Dimension: 56*24*103mm

01 FUNCTIONS

- Charge cellphone
- 3.0 to 6.0 Volt variable voltage (VV)
- 3.0 to 15.0 Watt variable voltage (VW)
- Resistance check
- Battery status
- RMS&MEAN Voltage
- Smoking time check
- Current display
- Output voltage display

Operation of Tmax V5

- Press 5 times continuously to turn on the mod.
- Press 3 times to browse the menu when the screen has shut down.
- Choose the menu and wait 2 seconds to enter it; then set the item and wait for 2 seconds to save your setting.
- If there is no operation in 2 seconds, you will exit the menu automatically. menu automatically.

02 MENU

The menu has 9 different functions:

1. ADD VOLT

Increase voltage/wattage

To increase the voltage from 3.0V to 6.0V in 0.1 Volt increments,
or power from 3.0W to 15.0W in 0.5 Watt increments.

*Select Voltage or Wattage in menu VOLT&POWER.

2. DEC VOLT

Reduce Voltage/Wattage

To reduce the Voltage from 6.0V to 3.0V in 0.1 Volt decrements,
or power from 15.0W to 3.0W in 0.5 Watt decrements.

*Select Voltage or Wattage setting in menu VOLT&POWER.

3. LOCK OUT

Disabling the button

The device can be disabled to prevent from unwanted firing by selecting ‘
OUT OFF’ . When ‘OUT ON’ is selected then the device will work normally and atomizer
will fire.

4. RESISTAN

To check the resistance of the atomizer.

5. DISPLAY

Switch LCD on/off

When ‘LCD:ON’ is selected, the LCD will display your settings
when the button is pressed. When ‘LCD:OFF’ is selected, the LCD
will not display your settings when the button is pressed.

6. VOLT&POWER

Select VV or VW

To choose between variable voltage and variable wattage.

7. RMS&MEAN

Select RMS or MEAN voltage.

*RMS is recommended.

8. Mobile

To charge the mobile phone

Connect the mobile phone to the Tmax V5 with a USB charger.

Choose 'Mobile OUT ON' , press for 10 seconds and it will charge the mobile phone.

In this period, the LCD will show 'Warning!' and 'No smoking' .

To stop charging, press for another 10 seconds and separate the mobile phone and Tmax V5.

Please make sure you have set Mobile Out OFF after charging, and only in this mode can you smoke.

9. EXIT

03 NOTES

1. Clean the thread after using in case of rusting and corrosion.
2. Do not reverse the battery in the tube.
3. Turn off Tmax when not using.
4. Do not use the protected batteries.

Error-code: : Short=short circuit of the atomizer

Low-V= under voltage

HHH= over voltage

*When the resistance of the atomizer is below 1.2Ω , the Zmax will not work.

*Use only one battery when smoking.

Warranty and Guarantee:

12 months

Improper operation will void the warranty.

Do not drop Tmax

Electronic cigarette are not suitable for the juvenile, the non-smoking, people with nicotine allergy, people with allergy to propylene glycol, pregnant women and people with cardiovascular disease.